



Prism+

Instructions

**Welcome To The
Pinned Family.**


Table Of Contents

What's In The Box?	1
Get To Know Your Prism+	1
How To Use Your Prism+	2
Features	2
Display Icons	3
Changing Display Brightness	3
Tech Specs	4
Ranging Info	5
Troubleshooting	5
Safety Info	6
Legal Notice	6
Compliance	7
Warranty Info	7
Contact Us	8

What's In The Box?

- Prism+ Rangefinder
- MagClose Hardcover Case
- USB-C Charging Cord
- Lens Cleaning Cloth
- Bag Clip
- Ball Marker
- Pinned Sticker

Get To Know Your Prism+

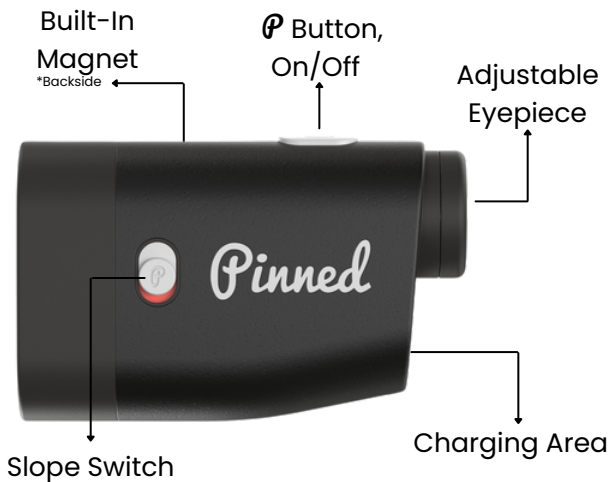

How To Use Your Prism+

1. Charge Prism+ for one hour or until green light is on.
2. Click **P** button to turn unit on. Our automatic shut off feature will activate after 10 seconds and shut the unit off.
3. Look through the lens and turn the eyepiece clockwise or counter clockwise until the image is sharp.
4. Aim the target through the cross on the display.
5. When on target, simply click the **P** button once. Your distance will instantly appear.
6. If you would like to turn slope on, slide the **P** button on the side of the unit.
7. If you would like to change the unit of measurement, go into the charging area and move the Y/M switch to your desired measurement.

Features



Slope
Technology



USB-C
Charged



Built-In
Magnet



65 Round
Battery Life



PinnedLock
Vibration



4K
Display



IP54
Resistant



Initial Target
Detection




Tournament
Legal



Two Year
Warranty

Display

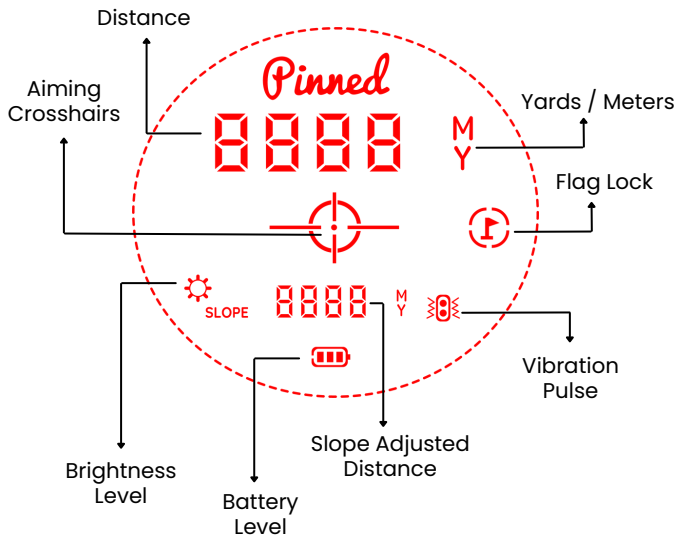

Changing Display Brightness

If you would like to change the brightness of the display, please read below.

When device is off, press and hold the P button. It will show different brightness levels: *BRT1* – *BRT5*.

BRT1 is the dimmest while *BRT5* is the brightest. Do not release the button until you have the brightness you prefer.

Tech Specs

- Dimensions | **118*72*41 mm**
- Weight | **.53lbs**
- Range | **1-1,300 yards / 1-1,190 meters**
- Accuracy | **+/- 1 yard**
- Magnification | **7x**
- Waterproof Rating | **IP54**
- Battery | **1,000mA Rechargeable - 65 round life**
- Display | **4K**
- Case | **MagClose hard cover case**
- Magnet | **Three N52 neodymium magnets**
- Charging | **USB Type C**

Battery Level

- Full charge 
- Approx. 2/3 battery life remaining 
- Approx. 1/3 battery life remaining 

Ranging

- Be aware that snow, rain, and fog will have an adverse effect on ranging ability.
- Shiny, reflective surfaces will usually reflect better than dull, textured surfaces.
- Ranging under cloud cover can improve performance compared to bright sunny conditions.
- The position of the sun compared to the rangefinder and/or range target will greatly affect performance.
- Flat surfaces perpendicular to the laser pulse will reflect better than curved surfaces or surfaces angled in relation to the laser pulse.
- At longer distances, larger objects will be ranged easier compared to smaller objects.

Troubleshooting

- Never disassemble your Prism+. Damage resulting from unauthorized disassembling voids the warranty.
- If unit doesn't turn on, display does not illuminate:
 - Press the power button.
 - Check to make sure unit is charged.
 - Charge battery for one hour if needed.
- If unit powers down (display goes blank):
 - The battery is low. Please charge for one hour.
- If target range cannot be obtained:
 - Make sure that the **P** button is being clicked.
 - Keep your hands or fingers away from the objective lenses which will block the laser ray path.
 - Make sure the rangefinder is held steady while clicking the **P** button.

Safety Information

- Do not stare directly at or into the laser beam.
- Do not aim the rangefinder at the sun. Your eyes and the components inside can be permanently damaged looking into the sun with this device.
- Keep the eyepiece away from direct sunlight.
- Do not put the device in an environment out of a temperature range between 50 -140° F or 10-60° C.
- Before use, charge battery for one hour. Lift the battery door and insert the USB-C charging cord into the charging port.

WARNING: This product uses a Lithium based battery. Lithium batteries can overheat and cause damage if physically abused.

Legal Notice

By using this product, you agree that Pinned Golf LLC, will not be held legally responsible for any injury or damage to you, or any person or property caused by the user's improper operation and/or poor judgment while using this product.

Note: See Limited Warranty for other limitations to our liability.

Compliance

This device complies with part 25 of the FCC rules.

Operation is subject to the following two conditions:

- 1.This device may not cause harmful interference, and
- 2.This device must accept any interference received including interference that may cause undesired operation.

Two Year Limited Warranty

Your Pinned Golf laser rangefinder is warrantied to be free of defects in materials and workmanship for two years after the date of purchase.

In the event of a defect under this warranty, we will, at our option, repair or replace the product, provided that you return the product using our prepaid postage.

This warranty does not cover damages caused by misuse, improper handling, installation, or maintenance provided by someone other than Pinned Golf. Please note, this warranty is not transferable.


Need Help?

Questions or concerns about your Prism+?

Reach out to us at
support@pinnedgolf.com

Follow Us!

Monthly giveaways, free product,
huge discounts and more!

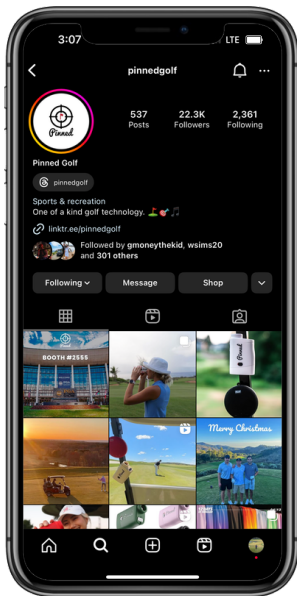



Pinned Golf LLC.
Boston, MA

Register Your Rangefinder

LIFETIME BENEFITS | EXCLUSIVE OFFERS | TIER 1 CUSTOMER SUPPORT



Follow Us!

Monthly giveaways, free product,
huge discounts and more!

